



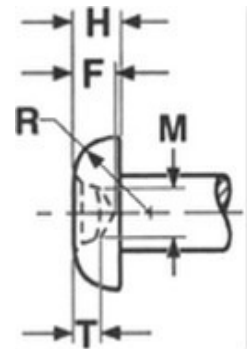

## TRANSHOW SCREW FACTORY

GAOYANG RD, ZHOUHAN VILLAGE, JIANGSHAN TOWN  
 YINZHOU DISTRICT, NINGBO CITY, 315100 CHINA  
 Tel: +86-574-8736.7873 Fax: +86-574-8736.4349  
[www.transhow.net](http://www.transhow.net) Email: [transhow@transhow.net](mailto:transhow@transhow.net)

# Pan Head Square Drive

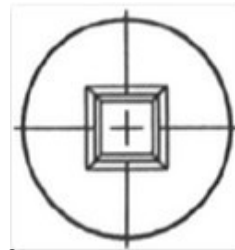

Inch Series as per ANSI/ASME standard dimensions

Nominal		H		R	M		T		Driver Size	P	
Size or Basic Screw Diameter		Head Height		Head Radiu s	Recess Square		Recess Depth			Penetration Gauging Depth	
		Max	Min	Min	Max	Min	Max	Min		Max	Min
3	0.0990	0.078	0.067	0.01	0.071	0.07	0.073	0.063	0	0.038	0.032
4	0.1120	0.086	0.075	0.01	0.071	0.07	0.073	0.063	0	0.038	0.032
5	0.1250	0.095	0.083	0.015	0.091	0.09	0.113	0.105	1	0.065	0.057
6	0.1380	0.103	0.091	0.015	0.091	0.09	0.113	0.105	1	0.065	0.057
7	0.1510	0.111	0.099	0.015	0.091	0.09	0.113	0.105	1	0.065	0.057
8	0.1640	0.12	0.107	0.015	0.112	0.111	0.14	0.119	2	0.075	0.065
10	0.1900	0.137	0.123	0.02	0.112	0.111	0.14	0.119	2	0.075	0.065
12	0.2160	0.153	0.139	0.025	0.133	0.132	0.165	0.155	3	0.095	0.085
1/4"	0.2500	0.175	0.16	0.035	0.133	0.132	0.165	0.155	3	0.095	0.085
5/16"	0.3125	0.216	0.198	0.04	0.191	0.19	0.201	0.191	4	0.1	0.09
3/8"	0.3750	0.256	0.237	0.04	0.191	0.19	0.201	0.191	4	0.1	0.09