




TRANSHOW SCREW FACTORY

GAOYANG RD, ZHOUSHAN VILLAGE, JIANGSHAN TOWN
 YINZHOU DISTRICT, NINGBO CITY, 315100 CHINA
 Tel: +86-574-8736.7873 Fax: +86-574-8736.4349
www.transhow.net Email: transhow@transhow.net

Pan Head Torx Drive Dimensions

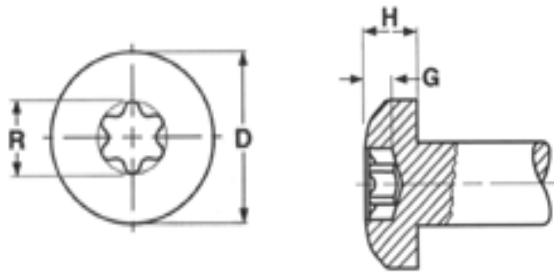

Screw Size	Head Dimensions				Recess Dimensions		
	D		H		R	G	(Fall away) Penet ration
	Head Diameter		Head Height		Ref.	Gage Penet ration	
	Max.	Min.	Max.	Min.		Min.	Max.
4	0.219	0.21	0.08	0.07	0.11	0.04	0.02
6	0.27	0.26	0.1	0.09	0.13	0.05	0.02
8	0.322	0.31	0.12	0.11	0.16	0.06	0.03
10	0.372	0.36	0.13	0.12	0.18	0.07	0.03